

# Xebra Vehicle Steering Arm Washer

Last updated May 21, 2007


Copyright 2007. This document may not be reprinted, published, emailed or posted on the Internet without the approval of ZAP.

## Intended Readers

The purpose of this manual is to provide a qualified electric car mechanic or technician with the information to correct the addressed service issues. Check with ZAP if you are unsure who to have do the work. ZAP is not responsible for damage to your vehicle or personal injury for work done by non-qualified personnel.

The purpose of this document is to describe how to add a washer under the nut that holds the bolt connecting the rack and pinion steering arm to the steering strut bell crank. This washer will extend the performance of the system.

Remove this nut and place a 3/8" washer here. Then replace and tighten the castle nut and reinsert the cotter pin. Here is the rack and pinion steering arm.

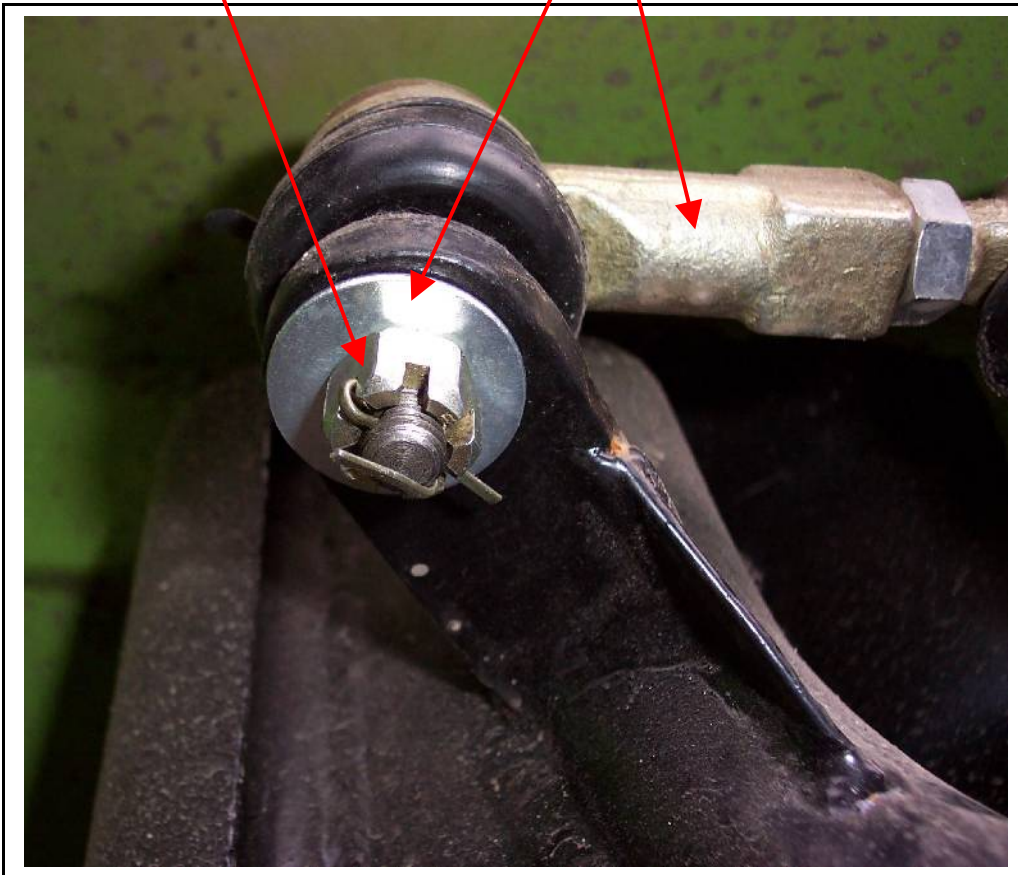

Sometimes two washers should be used if there is enough room to still get the cotter pin in after tightening the castle nut.

